

JDP

BUILT FOR LIFE

**PARTS LIST
&
MOUNTING
INSTRUCTIONS**

**6500D
Toro ROPS**

6500D TORO ROPS PARTS LIST

BRACKETS, SHIELDS, ETC.:

Item	Qty	Description
2	1	Front bracket
1	L&R	Rear brackets

HARDWARE:

Qty	Description
2	10x35x1.5mm Hex bolts (gr.5)
7	12x35x1.75mm Hex bolts (gr.5)
2	7/16" Lockwashers
4	1/2"x3" Hex bolts (gr.8)
4	1/2" Hex nuts (gr.8)
11	1/2" Lockwashers
4	9/16"i.d.-2 1/2"o.d. Flatwashers

MISCELLANEOUS:

Item	Qty	Description
**	4	9/16"i.d.-2 1/2"o.d. Rubber flatwashers
**	4	9/16"i.d.-3"o.d. Rubber mounts

6500D TORO ROPS MOUNTING INSTRUCTIONS

1. Remove the 2-post ROPS.
2. Locate the three-hole bolt pattern in the chassis, directly behind the left fender. Take the left rear bracket (1) and loosely bolt it to the chassis using the supplied 12x35x1.75mm hex bolts and 1/2" lockwashers in the rear, and 10x35x1.5mm hex bolt and 7/16" lockwasher in the front. (see figure 1)

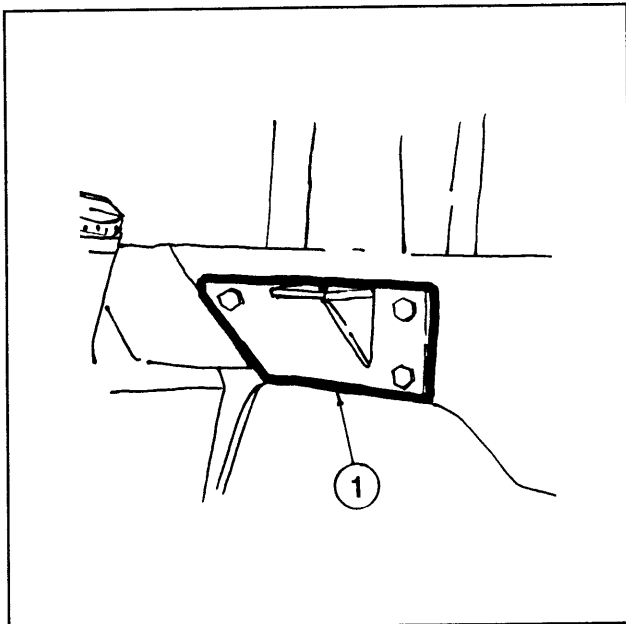


Figure 1

3. Repeat step 2 for the right rear bracket.
4. Locate the three-hole bolt pattern along the front of the operator platform. Take the front bracket (2) and loosely bolt it to the platform using the 12x35x1.75mm hex bolts and 1/2" lockwashers provided. (see figure 2)
5. **NOW YOU ARE READY TO MOUNT THE ROPS.** Place one rubber mount on each ROPS mounting plate of the front and rear brackets. Lift the ROPS, using

the lift bolts located near the roof, directly above the unit. Slowly, lower the ROPS until the ROPS mounts rest solidly on the rubber mounts. Bolt the ROPS snugly to the brackets as shown in figure 3.

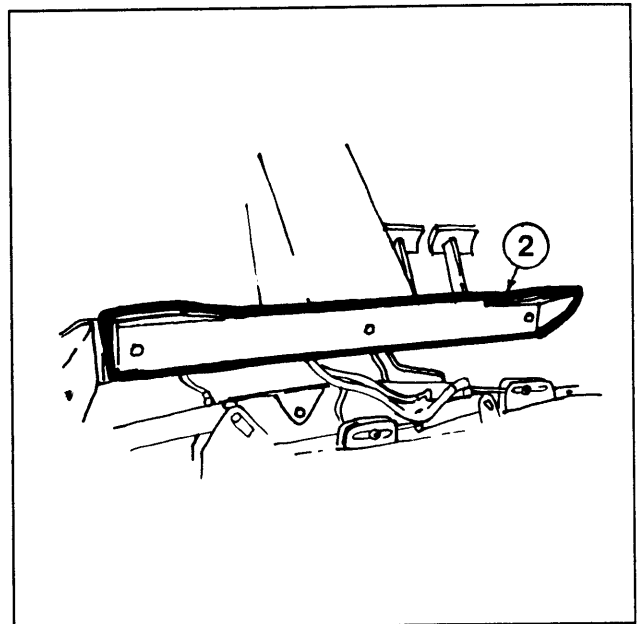


Figure 2

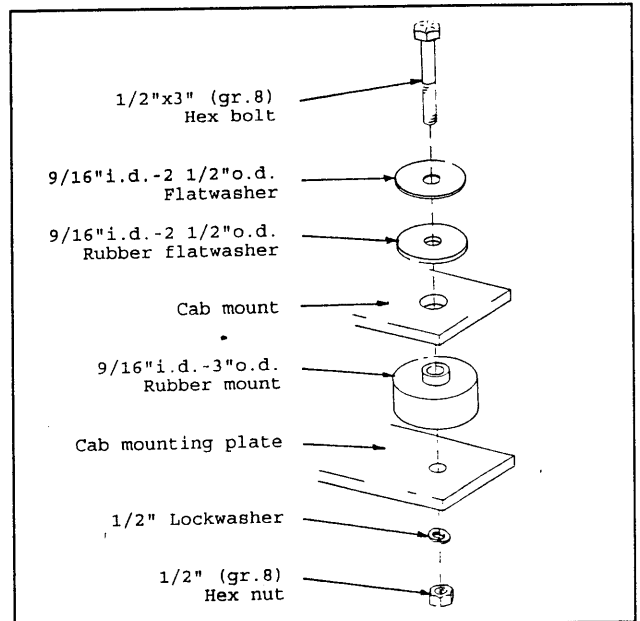


Figure 3

6. Tighten all front and rear bracket bolts. If the ROPS is

NOTE:

All references to left and right are taken from the operator's point of view when he/she is sitting in the seat.

6500D TORO ROPS MOUNTING INSTRUCTIONS

equipped with the golf ball protection kit, remove the side shipping brackets.

NOTE:

All references to left and right are taken from the operator's point of view when he/she is sitting in the seat.