


Strobe (800093) Installation


Item #	JDP Part #	Description	Qty
1	101272	Strobe Light W/Bullets	1
2	100901	Rocker Switch On/Off	1
3	101748	Switch Connector Block	1
4	100135	Fuse	1
5	101749	Strobe/Beacon Harness	1

1. Verify that all parts listed above match what was received.
2. Locate the bolts on top of the roof. Remove bolts. Remove roof from cab.
3. Mark and drill holes using rubber seal from strobe as a template. See Figure 1 for recommended location.
4. Install strobe light using included hardware.

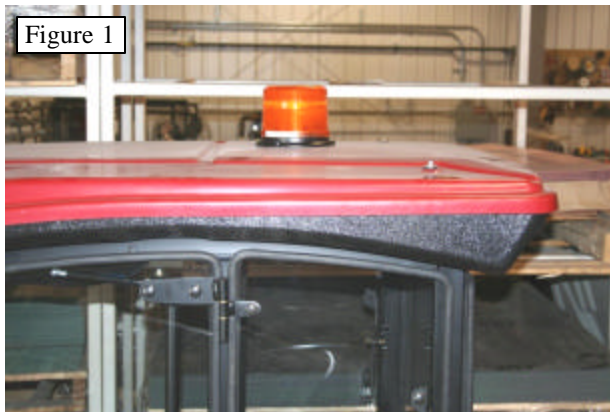

Note: Follow steps 6-9 if the cab has flashers and discard items # 2-4. To finish installation, continue steps 13-15. Without flashers go to step 10.

5. Unplug the flasher power-wire from the fuse-box See Figure 2 for fuse-box location.
6. Plug the harness power-wire (with pig-tail) into the fuse-box.

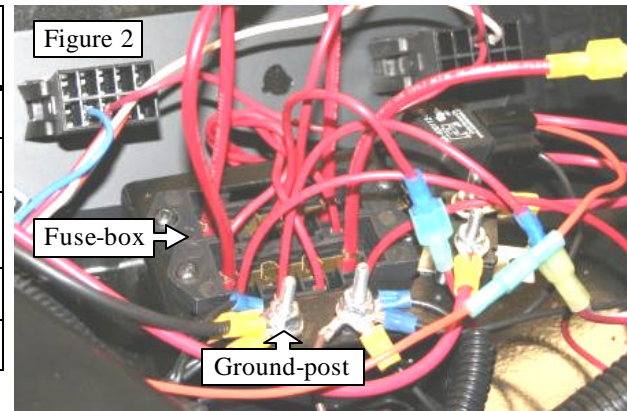

7. Plug flasher-power-wire into harness-power-wire-pigtail.
8. Insert the two female blade connectors into the switch connector block No. 3 & 4 (Hazard switch).
9. Locate the switch-plate with the hazard symbol on it and cut the decal to accommodate switch (2) install switch.
10. Connect power-wire to fuse pig-tail. See Figure 2 for fuse-box location. See label inside of cover for proper fuse location.
11. Insert the two female blade connectors into No. 3 & 4 of the switch connector block (3).
12. Screw ground wire onto ground-post. See Figure 2 for ground-post location.
13. Plug bullet ends of harness into bullets of strobe.
14. Re-install roof.